

DIGITUS Electrically Height-Adjustable Table Frame, dual motor, 3 levels, gray

DA-90435 EAN 4016032482017





Height Adjustable Standing Desk Frame Dual motor, 3-stages, grey

With this height-adjustable table frame you can easily convert your desk into an ergonomic sit/stand workstation. Save the cost and hassle of finding a height-adjustable desktop and just use the DIGITUS® electrically height-adjustable table frame instead. This set is suitable for all tabletops between 110 and 200 cm in width and 60 to 100 cm in depth. 4 different heights can be programmed and saved using the touch display. The frame allows height adjustment from 62 to 127 cm. The lifting speed is 35 mm/sec. The anti-collision function automatically stops the table when hitting obstacles during up and down movement. The anti-collision function can be set to 3 different sensitivity levels. The frame can lift a maximum load of 100 kg and is equipped with a display lock / child lock for the control panel. Improve your health and prevent postural damage and impairments of the musculoskeletal system.

Convert your standard desk into an ergonomic standing/sitting workstation

- Maximum load capacity of up to 100 kg
- Flexible frame Suitable for tabletops 110-200 cm wide and 60-100 cm deep
- Convenient electrical height adjustment (without tabletop): 62-127 cm
- Touchscreen with memory function for 4 different height settings as well as height display

- Two motors for fast and quiet (<50 dB) height adjustment Lifting speed 35 mm/sec.
- Collision protection function with 3 sensitivity settings Detection of obstacles during up & down movement
- Auto-Stop System Stops the motor in case of resistance and automatically retracts the frame slightly
- · Child lock / display lock
- Two integrated motors for smooth height adjustment with high load capacity and secure positioning
- Noise level: <50 dB
- Maximum dimensions: W 170 x D 68 x H 127 cm
- Minimum dimensions: W 110 x D 68 x H 62 cm
- Weight: 28.3 kg
- Color: Gray RAL 7038
- Power supply cable: Euro, plug (type C, CEE 7/16) C7, device socket, length: 3 m
- Shape: Rectangular
- · Color: Grey
- · Shape: Square

Package contents

- Electrically Height-Adjustable Table Frame
- Assembly instructions (frame)
- User manual (display)
- Mounting material

Logistics						
	Number (pcs)	Weight (kg)	Depth (cm)	Width (cm)	Height (cm)	cm³
Packaging Unit Carton	1	28.30	0.00	0.00	0.00	0.00
Packaging Unit Inside	1	28.30	0.00	0.00	0.00	0.00
Packaging Unit Single	1	28.30	0.00	0.00	0.00	0.00
Net single without Packaging	0	0.00	0.00	0.00	0.00	280.83



More images:















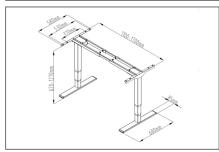

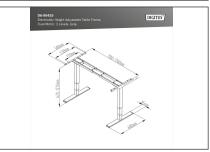

Safety notes

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of
 experience and knowledge if they have been given supervision
- or instruction concerning use of the appliance in a safe way.
- device and understand the dangers involved
- Persons with reduced physical or mental capabilities or lack of experience and knowledge must not use the product unless they are supervised, understand the hazards involved or have been thoroughly instructed
- in the use of the appliance by a person responsible for their safety
- Children are not allowed to play with the device, as unforeseen actions while playing can lead to dangerous consequences for which the
 manufacturer is not responsible
- · Familiarize yourself with all the functions and program settings of the appliance before using it for the first time.
- · Carefully check the correct and complete assembly before use
- Cleaning and user maintenance must not be carried out by children without supervision
- If the mains cable is damaged, it must be replaced by the manufacturer, its customer service department or a similarly qualified person in order to avoid a hazard
- · Make sure that there are no sources of danger in your working environment, e.g. do not throw the tools in the garbage.
- Always pay attention to the packaging materials to avoid possible dangers, e.g. plastic bags can lead to choking hazards for children.
- Keep the original packaging of the device, if necessary, in case you want to transport it later.
- Power supply: AC 100 V 240 V, 50 / 60 Hz
- Operating temperature: 0 40°C
- Before cleaning, unplug the appliance, wipe the dust off the surface with a slightly damp tea towel, make sure that no drops get into the internal
 parts and do not lose the plug
- The electrical box contains electronic components, metals, plastics, wires, etc., so dispose of them in accordance with the environmental
 regulations of the respective country and not with general household waste.
- Slight noises caused by the V-ribbed belt or the brake system have no influence on the use of the appliance.
- Cleaning the appliance with corrosive or abrasive materials is prohibited. It must be ensured that the cleaning agent used does not pollute the environment.
- This appliance may only be used together with the power supply unit supplied. Any person responsible for installing or using the table in daily use
 or for servicing and repair work on this table should
- read these instructions carefully. Keep these instructions in the vicinity of your sitting/standing table.
- The table may only be used as a work table with the option of infinitely variable adjustment of the working height between a sitting and standing position. The table may only be used indoors and in dry rooms (office environment or similar).
- The table must not be overloaded the maximum load is 120 kg. The motors may be operated continuously for a maximum of 2 minutes. After this, the motors must stand still for approx. 18 minutes before they can be used again.
- Failure to observe the safety and installation instructions in this manual may result in serious personal injury.
- Users should never sit on the work surface to avoid serious personal injury.



- Do not clean the appliance with water if it is still connected to the power supply.
- Do not disassemble or replace components while the appliance is connected to the mains supply
- Never operate the system with a damaged cable or plug.
- · Never operate the system in a damp environment or if its electrical components come into contact with liquids.
- Do not operate the system if the control box causes noises or odors. Modifications to the appliance and the control box are not permitted.
- Remove all obstacles in the height adjustment area.
- To avoid tripping hazards, do not leave cables or plugs lying around disorderly.
- Any attempts to modify the table frame are not permitted
- Nothing may be attached to the adjustable connections of the table frame.
- · Outdoor use is prohibited.
- When raising and lowering the table, maintain the required safety distance to avoid being trapped between the moving tabletop and fixed objects in the vicinity.
- When moving the table up and down, the user must ensure that nobody is injured and that no objects are damaged. The table top must not hit a solid object so that the table tips over. The office chair must be removed before the table is raised or lowered.
- Modifications to the switch box are strictly prohibited.
- The table must not be used as a lifting device for persons

EU responsible person

EU based economic operator ensuring the product complies with the required regulations.

ASSMANN Electronic GmbH Auf dem Schüffel 3 Lüdenscheid, Germany https://www.assmann.com info@assmann.com